



Product Data Sheet

FilmTec™ Membranes

FilmTec™ Heat Sanitizable RO 390-FF Element

Description


FilmTec™ HSRO-390-FF heat sanitizable reverse osmosis membrane element delivers outstanding quality water with the added capability to withstand sanitization with hot water. Hot Water sanitization eliminates the need for chemical sanitizers. The full-fit configuration minimizes stagnant areas and is optimal for applications requiring a sanitary design. All components comply with FDA standards.

Typical Properties

FilmTec™ Element	Part Number	Active Area ft ² (m ²)	Applied Pressure psig (bar)	Stabilized Permeate Flow	
				Rate gpd (m ³ /d)	Stabilized Salt Rejection %
HSRO-390-FF	170701	390 (36)	150 (10.3)	9,000 (34)	99.5

1. Permeate flow and salt rejection based on the following test conditions: 2,000 ppm NaCl, pressure specified above, 77°F (25°C) and 15% recovery.
2. Elements must be conditioned prior to start-up. A one-time flux loss will occur during stabilization. Listed values apply after performance stabilization.
3. Permeate flows for individual elements may vary +/-20%.
4. For the purpose of improvement, specifications may be updated periodically.

Element Dimensions

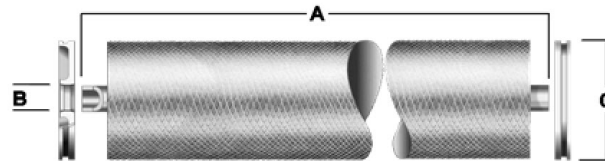

DuPont supplies two end caps (part number 113199) and one coupler (part number 255289) with each HSRO-390 element. Each coupler includes two 3/8" ID EPR O-Rings (part number 151705).

FilmTec™ Element	Dimensions – inches (mm)		1 inch = 25.4 mm
	A	B	C
HSRO-390-FF	40.0 (1,016)	1.13 ID (28.6)	7.9 (200)

1. Refer to [FilmTec™ Design Guidelines for multiple-element systems of 8-inch elements](#) (Form No. 45-D01695-en).
2. HSRO-390-FF fits nominal 8 inch I.D. pressure vessels.

Operating and Cleaning Limits

Membrane Type	Polyamide Thin-Film Composite
Maximum Operating Temperature ^a	113°F (45°C)
Maximum Sanitization Temperature (@ 25 psig)	185°F (85°C)
Maximum Operating Pressure	600 psig (41 bar)
Maximum Element Pressure Drop	15 psig (1.0 bar)
pH Range	
Continuous Operation ^a	2 - 11
Short-Term Cleaning (30 minutes) ^b	1 - 12
Maximum Feed Silt Density Index (SDI)	SDI 5
Free Chlorine Tolerance ^c	< 0.1 ppm

a. Maximum temperature for continuous operation above pH 10 is 95°F (35°C).

b. Refer to [FilmTec™ Cleaning Guidelines](#) (Form No. 45-D01696-en).

c. Under certain conditions, the presence of free chlorine and other oxidizing agents will cause premature membrane failure. Since oxidation damage is not covered under warranty, DuPont Water Solutions recommends removing residual free chlorine by pretreatment prior to membrane exposure. Please refer to [Dechlorinating Feedwater](#) (Form No. 45-D01569-en) for more information.

Important Information

Before pre-conditioning, membranes will operate at reduced feed pressure and salt rejection. New FilmTec™ HSRO heat sanitizable spiral elements must be pre-conditioned prior to initial use by exposure to hot water, to perform to specifications. Suitable quality water must be used during all pre-conditioning steps. This water is chlorine-free, non scaling/fouling water. RO permeate is preferred, but pre-filtered feed water may be used. An appropriate conditioning procedure consists of the following:

1. Flush to drain with suitable quality water (for ~30 min) at low pressure and low permeate flowrate.
2. Recycle warm water until the system warms up (45°C or less) at very low pressure (< 25 psig (1.7 bar) trans-membrane pressure with a maximum feed pressure of 45 psig (3 bar)). Maximum pressure drop through a single element is 1.5 psig (0.1 bar).
3. Introduce hot water to the system to increase temperature to 80°C (176°F). Ramp temperature up at a rate no faster than 1-2 °C/min (max 4°C/min).
4. Keep trans-membrane pressure below 25 psig (1.7 bar) when warm or hot water (45°C or higher) is being fed to the membranes.
5. Maintain temperature for 60 – 90 minutes.
6. Allow system to cool to 45°C or below. Ramp temperature down at a rate no faster than 1-2 °C/min (max 4°C/min).
7. Flush to drain with suitable water quality (for ~30 min) at very low pressure (< 25 psig (1.7 bar) trans-membrane pressure with maximum feed pressure of 45 psig (3 bar)).

Note:DO NOT recycle permeate during the FIRST heat-setting process (pre-conditioning) from step 2 to 6. In case the system does not allow to drain permeate during heating process, please contact your DuPont representative for further information and alternatives.

Note:DO NOT start-up a second pass RO before the first pass RO has been pre-conditioned.

The procedure for regular sanitization may be the same as described above, in this case both concentrate and permeate may be recycled.

Operation Guidelines

Avoid any abrupt pressure or cross-flow variations on the spiral elements during start-up, shutdown, cleaning or other sequences to prevent possible membrane damage. During start-up, a gradual change from a standstill to operating state is recommended as follows:

- Feed pressure should be increased gradually over a 30-60 second time frame.
- Cross-flow velocity at set operating point should be achieved gradually over 15-20 seconds.

Please refer to [FilmTec™ Reverse Osmosis Membranes Technical Manual](#) (Form No. 45-D01504-en).

General Information

- Keep elements moist at all times after initial wetting.
- If operating limits and guidelines given in this bulletin are not strictly followed, the limited warranty will be null and void.
- To control biological growth during prolonged system shutdowns, it is recommended that membrane elements be immersed in a preservative solution.
- The customer is fully responsible for the effects of incompatible chemicals and lubricants on elements.
- Maximum pressure drop across an entire pressure vessel (housing) is 60 psi (4.1 bar).
- Avoid static permeate-backpressure at all times.

Product Stewardship

DuPont has a fundamental concern for all who make, distribute, and use its products, and for the environment in which we live. This concern is the basis for our product stewardship philosophy by which we assess the safety, health, and environmental information on our products and then take appropriate steps to protect employee and public health and our environment. The success of our product stewardship program rests with each and every individual involved with DuPont products—from the initial concept and research, to manufacture, use, sale, disposal, and recycle of each product.

Customer Notice

DuPont strongly encourages its customers to review both their manufacturing processes and their applications of DuPont products from the standpoint of human health and environmental quality to ensure that DuPont products are not used in ways for which they are not intended or tested. DuPont personnel are available to answer your questions and to provide reasonable technical support. DuPont product literature, including safety data sheets, should be consulted prior to use of DuPont products. Current safety data sheets are available from DuPont.

Please be aware of the following:

- The use of this product in and of itself does not necessarily guarantee the removal of cysts and pathogens from water. Effective cyst and pathogen reduction is dependent on the complete system design and on the operation and maintenance of the system.
- Permeate obtained from the first hour of operation should be discarded.

Have a question? Contact us at:

www.dupont.com/water/contact-us

All information set forth herein is for informational purposes only. This information is general information and may differ from that based on actual conditions. Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other government enactments. The product shown in this literature may not be available for sale and/or available in all geographies where DuPont is represented. The claims made may not have been approved for use in all countries. Please note that physical properties may vary depending on certain conditions and while operating conditions stated in this document are intended to lengthen product lifespan and/or improve product performance, it will ultimately depend on actual circumstances and is in no event a guarantee of achieving any specific results. DuPont assumes no obligation or liability for the information in this document. References to "DuPont" or the "Company" mean the DuPont legal entity selling the products to Customer unless otherwise expressly noted. **NO WARRANTIES ARE GIVEN; ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.** No freedom from infringement of any patent or trademark owned by DuPont or others is to be inferred.

© 2022 DuPont. DuPont™, the DuPont Oval Logo, and all trademarks and service marks denoted with ™, SM or ® are owned by affiliates of DuPont de Nemours Inc., unless otherwise noted.

